

INSTRUCTION MANUAL HALOGEN HEATER



Thank you for choosing **WELL**. Please read carefully the following instructions and keep them within reach.

Reorder No: HTR-HAL-1200-WL

IMPORTANT SAFETY ADVICE

- The appliance must only be used as described in the instructions for use! Any damage resulting from improper use and non-observance of the safety information will void the warranty!
- Only connect the appliance to A.C. mains as specified on the rating plate!
- Never operate the appliance with wet hands! Electrical hazard!
- Do not use the appliance in rooms with bath, shower or swimming pool or in the vicinity of wash basins.
- Do not expose the appliance to rain or other moisture! The appliance is not for outdoor use. The appliance must only be stored indoors!
- The appliance may only be used for normal domestic use and not for industrial purposes.
- Never use the appliance if the appliance or cord is damaged. Risk of injury!
- The appliance may only be opened up and repaired by authorized qualified personnel.
- Do not store or use any flammable materials or sprays in the vicinity of the appliance when the appliance is in use.
- Do not use the appliance in flammable atmospheres (e.g. in the vicinity of combustible gases or spray cans)! Explosion and fire hazard!!
- **Important!** Do not insert any foreign objects into the appliance openings! Risk of injury (electric shock) and damage to the appliance!
- **WARNING:** In order to avoid overheating, do not cover the heater.
- The appliance is not suitable for connection to permanent wiring!
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- The socket-outlet must be accessible at all times to enable the mains plug to be disconnected as quickly as possible!
- Only use an approved extension cord that is suitable for the appliance rating!
- Position the power cord so that it does not pose a tripping hazard and possibly cause the appliance to be knocked over.

Important! - If the mains lead of this appliance is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

PACKAGING

- After unpacking the appliance, check the same for transport damage and the contents for completeness!
- In the event of damage or an incomplete delivery, contact your authorized retailer!
- Do not discard the original box! It can be used for storage and dispatch to avoid transport damage!
- Dispose of the packaging material in a proper manner! Plastic bags should be kept away from children!



WARNING:

Packaging materials are not toys!
Children must not play with plastic bags!
Danger of suffocation!

LOCATION

The appliance should be placed with a minimum distance of 50cm from flammable objects, walls or other structures!
The appliance openings must not be obstructed in any way!
Do not place the appliance on unstable surfaces (e.g. a bed), where it can tip over!
The appliance must not be operated directly on high pile carpets.

START UP


After switching on the appliance for the first time and after an extended period of non-use, a smell may be noticed for a short time.
To use, insert the plug in the socket.

ASSEMBLY

1. Assemble the body frame and the base plate together as the following sequences. Remove the mounting screw from the lower part of the body frame.
2. Insert the power cord through the slot placed in the middle part of the basement and then assemble the body frame to the base plate.
3. Secure the body frame to the base plate by means of the two mounting screw previously removed. Insert the power cord through the suitable slots and then fix it by the clamp.

COMPONENTS

1. Body frame
2. Base plate
3. Butterfly (2pcs)
4. Tip-over safety switch rod
5. Power cord

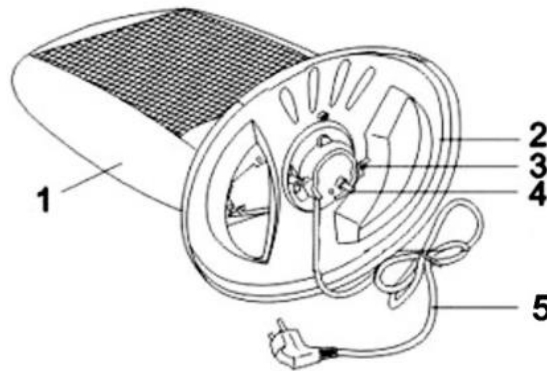

OPERATION

Plug in the appliance. Check that the outlet has at least a 10A current carrying capacity. Select the speed by suitable switches. Press or turn the oscillating switch to make the heater oscillate. Press or turn it again to shut off the oscillating movement of the appliance.

MANUAL CONTROL

You can control the unit by manual, it is on the panel of the unit:

Press once the power button, the unit works on 400W, press once again, it settled on 800W, if press three times, it settled on 1200W.

You can press the swing button to do the setting, press once, it activates for its oscillation, press twice, it deactivates oscillation.

Press OFF to turn unit off.

SAFETY DEVICE

This appliance is provided with one safety device, the safety device disconnects the appliance when the heater is tilted.

MAINTENANCE

Switch off the appliance first and disconnect the plug from the socket!

Clean the housing with a moist cloth, vacuum cleaner or brush.

Do not use any abrasive or caustic cleaning agents!

Do not use any flammable cleaning agents e.g. petrol or spirit for cleaning the appliance.

Never immerse the appliance in water! Electrical hazard!

Air inlet and outlet area should be cleaned with a vacuum cleaner regularly

If the appliance is not used for extended periods, it must be protected against excessive dust and dirt.

SERVICE

If the connecting cable (or mains plug) is damaged, it must be replaced by a particular connecting cable which is available from our service department. Replacement of the connecting cable must only be carried out by our service department or by a qualified person (qualified electrician).

STORAGE

Thoroughly clean the whole machine and its accessories.

Store it out of the reach of children, in a stable and secure position, in a cool and dry place, avoid too high and too low

temperatures.

Protect it from exposure to direct sunlight. Keep it in the cool place, if possible.
Don't keep it in plastic bags to avoid humidity build-up.

TECHNICAL DATA

Voltage: 230V

Maximum power: 1200W

3 heating power: 400W/800W/1200W

Tip-Over Switch

Halogen Heating Tube

Oscillation: 90°

IP20



Waste electrical and electronic equipment are a special waste category, collection, storage, transport, treatment and recycling are important because they can avoid environmental pollution and are harmful to health. Submitting waste electrical and electronic equipment to special collection centers makes the waste to be recycled properly and protecting the environment. Do not forget! Each electric appliance that arrives at the landfill, the field, pollutes the environment!



Importer & distributor:

SC VITACOM ELECTRONICS SRL

Str. 1 Mai nr 8, Loc Apahida; Jud Cluj

CIF: RO 214527

Tel. 0264-438401*

office@vitacom.ro, www.vitacom.ro