

# EASY FOR SONY

code 1724



Simplified replacement remote control for Sony TV sets – Symbology as in the original ones



Blister 5 x 23 x 3 cm  
Packaging 30 pcz.



|                             |   |
|-----------------------------|---|
| <b>Number of devices</b>    | 1   |
| <b>Controllable devices</b> | TV SONY   |
| <b>Controls</b>             | Main functions  |
| <b>Functions</b>            | Menu, AV, teletext  |
| <b>Brands</b>               | Compatible with all Sony models   |
| <b>Type of programming</b>  | No need of programming. You only have to insert batteries and it is ready to be used. |
| <b>batteries</b>            | 2x 1,5 V - AAA (not included)   |
| <b>Code stored</b>          | does not lose memory during battery replacement                                       |

