



2 Configure the Router

1 Connect your computer to the router (Wired or Wireless).

Wired



Wireless

Connect wirelessly using the SSID (Network Name) printed on the product label at the bottom of the router.



2 Configure the router using a web browser.

a. Enter http://mwlogin.net in the address bar of the web browser. Create a login password when prompted.

	Create Login Password					
If you forget the password, please restore the router to its factory default. Please enter 6-15 characters using a combination of numbers, letters and symbols.						
	New Password					
	Confirm Password					
	\rightarrow					

b. Select your connection type and enter the corresponding parameters. If you are unsure of your connection type, click Auto-Detect. Here we use PPPoE as an example.

Network				
Enter the username and password provided by your ISP.				
Connection Type PPPoE 🔹	Auto-Detect			
Username				
Password				
\rightarrow				

Note: If the login window does not appear, please refer to FAQ>Q1.

c. Customize your wireless network name and password.

Wire	less
2.4GHz Wireless	
Network Name (SSID)	MERCUSYS_XXXX
Password	
5GHz Wireless	
Network Name (SSID)	MERCUSYS_XXXX_5G
Password	
Copy 2.4GHz Wireless Passwo	rd

d. Click 🖉 to complete the setup. Then you can enjoy the Internet! 😔

Click 👽 to finish the setup.	
(!)	
The wireless settings have been changed. Please reconnect to the network when the setup is finished.	
\leftarrow \checkmark	

LED Indicators

LED	Status	Indication
SYS	Off Flashing	Power is off. The router is working properly.
2.4G 5G	Off On Flashing	2.4GHz/5GHz wireless is disabled. 2.4GHz/5GHz wireless is enabled. 2.4GHz/5GHz wireless is transmitting/receiving data.
WAN 4/3/2/1	Off On Flashing	The corresponding port is not connected. The corresponding port is connected. The corresponding port is transmitting/receiving data.

FAQ (Frequently Asked Questions)

Q1. What can I do if the login window does not appear?

- A1. If the computer is set to a static IP address, change it to obtain an IP address automatically.
- A2. Verify that http://mwlogin.net is correctly entered in the web browser.
- A3. Use another web browser and try again. A4. Reboot your router and try again.
- A5. Disable the network adapter used currently and then enable it again.

Q2. What can I do if I cannot access the Internet?

- A1. Check if the Internet is working properly by connecting a computer directly to the modem via Ethernet cable.
- If not, contact your Internet Service Provider.
- A2. Open a web browser, enter http://mwlogin.net and try to set up again.
- A3. Reboot your router and try again.

Note: For cable modem users, reboot the modem first. If the problem still exists, log in to the web management page, go to Advanced>Network> MAC Address Settings, select Use the current computer's MAC address (MAC Clone) and Save.

Q3. How do I restore the router to its factory default settings?

- A1. With the router powered on, press and hold the Reset button on the rear panel for approximately 8 seconds until all the LEDs turn on temporarily.
- A2. Log in to the web management page of the router, and go to Advanced>System Tools>Factory Default Restore, click Restore, then wait until the process completes.

Q4. What can I do if I forget my web management page password?

A. Restore the router to its factory default settings and then create a new password when prompted.

Q5. What can I do if I forget my wireless network password?

- A1. By default, the wireless network has no password.
- A2. If you have set password for the network, log in to the router's web management page, go to Basic>Wireless to obtain or reset your password.