

# INSTRUCTION MANUAL

## HAIR / BEARD & EAR / NOSE TRIMMER



Thank you for choosing **WELL**. Please read carefully the following instructions and keep them within reach.

**Reorder No: TRIMM-BRD-GROOVY-WL**

## BEARD TRIMMER



## ACCESSORIES




## GENERAL DESCRIPTION


- A) Battery Powered Beard Trimmer
- B) Battery Powered Ear & Nose Hair Trimmer
- C) 4 Guide Combs
- D) Cleaning Brush
- E) Oil
- F) Grooming Comb
- G) Stand

## BLADE ALIGNMENT

- Your clippers were carefully examined to ensure that the blades were oiled and aligned before leaving our factory.
- Blades must be realigned if they have been removed for cleaning or replacement.
- To realign the blades, simply match the upper and bottom blades teeth up, point for point. (End of top blade teeth should be approximately 1.2mm back from bottom blade, compare your clipper blades with the sketch).

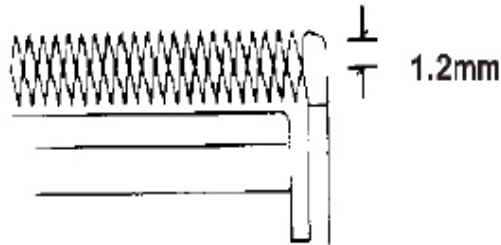


- If blade alignment is incorrect, add a few drops of oil to the blades, turn clipper on for a few moments, turn off and unplug. Loosen screws slightly and adjust. Tighten screws after blade is aligned.

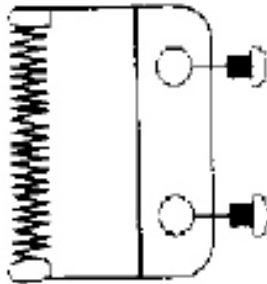

## OIL

- To maintain your clipper in peak condition, the blades should be oiled every few haircuts.
- Do not use hair oil, grease, oil mixed with kerosene or any solvent. As the solvent will evaporate and leave the thick oil which may slow down the blades motion.

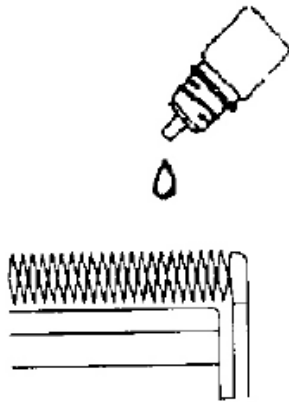

## **BLADE LEVER**

- The lever is conveniently located near your thumb (if you're right-handed) so it can easily be adjusted while the clipper is in your hand.
- The lever adds versatility to your clipper by allowing you to gradually change the closeness of your cut without an attachment comb.
- When the lever is in the uppermost position, the blades will give you the closest cut and leave the hair very short. Pushing the lever downward gradually increases the cutting length.
- In its lowest position, the lever will leave the hair approximately the same length as a #1 comb.
- The lever will also extend the use of your blades since a different cutting edge is used in each setting.
- In addition, if extremely heavy hair cutting has jammed the blades, it will help you remove hair that has become wedged between the two blades without removing the blades.
- While the clipper is running, rapidly move the lever from "close cut" to "longer" cut a couple of times.

Doing this each time after you have finished using your clipper will help to keep the blades clear of cut hair if your clipper stops cutting and this does not help, your cutting blades are dulled, Replace them with new blades.

## **IMPORTANT SAFEGUARDS**

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

To reduce the risk of death or injury by electric shock:

- Unplug this appliance before cleaning.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not use while bathing or in a shower.
- Do not place in, or drop into, water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug immediately.

To reduce the risk of burns, electrocution, fire, or injury to persons.

- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- This appliance should never be left unattended when plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or invalids.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly.
- Keep the cord away from heated surfaces.
- Do not pull, twist, or wrap line cord around appliance.
- Never drop or insert any object into any opening on this appliance.
- Before use, make certain blades are aligned properly.
- Do not place appliance on any surface while it is operating.
- Do not use this appliance with a damaged or broken comb or with teeth missing from the blades as injury may occur.

## **INSTRUCTIONS FOR HAIR CUTTING**

Before starting the hair cut:

1. Inspect the clipper, making sure that it is free of oil between the cutting blade teeth and turn the unit on to distribute the oil and to make sure it is running smoothly. Wipe off any excess oil. This should be done after each use. While using the unit, untwist the cord from time to time to avoid tangling.
2. Seat the person so their head is approximately at your eye level. This allows ease of visibility while cutting and a relaxed control of the unit.
3. Before cutting always first comb the hair so it is tangle free and as it is naturally worn.
4. Place a towel around the neck and shoulders of the person having the haircut.

## **REMINDERS**

- Cut the hair in a relaxed and slow manner. Use short strokes only to work gradually over the entire head.
- Always take off a little hair at a time, you can always trim off additional hair later.
- As you work, comb the hair frequently back into the style to which you are cutting.
- When cutting with this hair clipper it is better to leave the hair dry, not wet. With the hair dry, it is much easier to control the amount of hair being cut.

## **BEGINNING THE HAIRCUT**

Cutting hair requires practice so it is always better to leave the hair longer for the first few haircuts until you become used to the length from each attachment comb.

### **ATTACHMENT COMB (see main diagram)**

- Attachment Comb #1 leaves 3 mm (1/8 inch) hair length.
- Attachment Comb #2 leaves 6 mm (1/4 inch) hair length.
- Attachment Comb #3 leaves 9 mm (3/8 inch) hair length.
- Attachment Comb #4 leaves 12 mm (1/2 inch) hair length.

Each comb attachment is marked accordingly on its outside middle surface.

- To attach a comb, hold it with its teeth upward and slide it into and along the clipper blade until the front of the comb firmly seats against the clipper blade.
- To remove the comb, simply pull the comb upward and away from the clipper blade.
- For even cutting, allow the comb attachment/cutter to cut its way through the hair. Do not force it through quickly. Also remember to comb the hair frequently to remove trimmed hair and to check for uneven strands.

## **STEP 1 - NAPE OF THE NECK**

1. Attach comb attachment 3 mm or 6 mm.
2. Hold the clipper cutting edge pointed up and begin the haircut, starting at the center of the head at the base of the neck (see diagram 1).
3. Hold the clipper comfortably in your hand and hold lightly against the head with the comb teeth pointing upward. Gradually and slowly lift the clipper, working upwards and outwards, through the hair, trimming just a little at a time.
4. As you cut, gradually lift the hair clipper head towards you. Continue to cut the back area from the bottom of the neck upwards to the top of the ears.

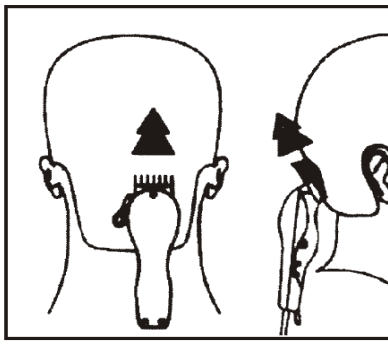


Diagram 1

## STEP 2 – BACK OF THE HEAD

Changed to the next longest comb attachment 9 mm or 12 mm (#3 or 4#) and cut the back of the head (see diagram 2).

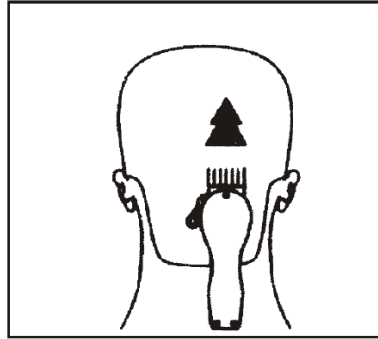


Diagram 2

## STEP 3 – SIDE OF THE HEAD

Change to one of the shorter combs 3 mm or 6 mm, trim sideburns, i.e. the hair directly in front of the ears.

Then change to one of the longer combs, 9 mm or 12 mm, and continue to cut to the top to the head (diagram 3).

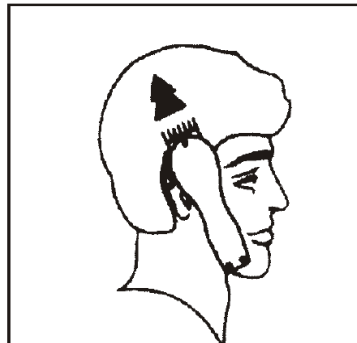


Diagram 3

## STEP 4-TOP OF THE HEAD

1. Using comb attachment 9 mm or 12 mm, cut top of head from back to front against the direction in which the hair normally grows (see diagram 4). In some cases, this may require the reverse, or cutting from front to back.
2. Comb attachments 3 mm or 6 mm are used to achieve a close crew cut or short cut.
3. For longer hair on top, use the comb provided and lift hair on the top of the head. Cut over the comb, with the hair lifted or hold the hair between the fingers to lift it and cut it to desired length (see diagrams 5 and 6). Always work from the back of the head. You can cut the hair shorter

gradually by reducing the space between the comb/fingers. And the head. Comb out trimmed hair and check for uneven strands.

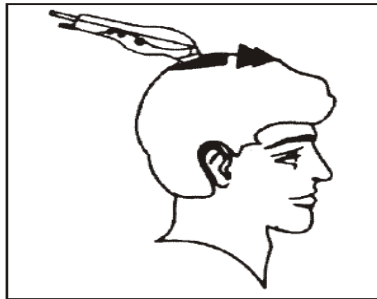


Diagram 5



Diagram 6

### **STEP 5 - THE FINISHING TOUCH**

1. Finally, use the taper lever without an attachment comp for close trimming around the base of the neck, the sides of the neck and the ears.
2. To produce a clean straight line at the sideburns, reverse the hair clipper by turning the reverse side uppermost (see diagram 7).
3. Press the clipper at right angles to the head, tips of the blades lightly touching the skin and work downwards. This way you will obtain, as a clean cut as would be given by a razor.

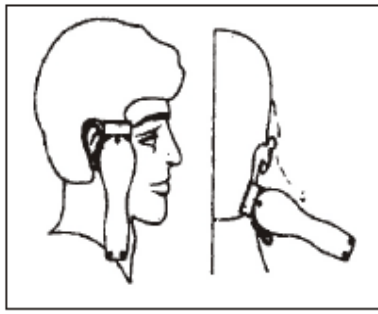


Diagram 7

### **SHORT TAPERED STYLES 'FLAT TOPS' AND SHORT CUTS**

1. Starting with the longest attachment comb (12 mm), cut from the back of the neck to the crown. Hold the attachment comb flat against the head and slowly move the clipper through the hair, as shown (see diagram 8).
2. Use the same procedure from the lower side to the upper side of the head, as illustrated. Then cut the hair against the direction in which it grows from the front to the crown and then level the cut with the sides.
3. To give a 'flat top' look, the hair on top of the head must be cut over the top of a flat comb rather than by using the attachment comb.
4. Use closer cutting attachment combs to taper the hair down to the neckline as desired. Comb hair and check for uneven areas and outlining sideboards and neckline as described previously.



Diagram 8

### **BATTERY CARE**

This appliance is designed for use with two AA batteries (not included). If the appliance motor slows down in operation or becomes less efficient, replace the batteries.

To replace the batteries, gently remove the rear battery cover and insert two (2) AA batteries observing correct polarity. Replace the battery cover and ensure a good fit.

### **CLEANING AND MAINTENANCE**

Do not use water on any part of the trimmer, it is not a waterproof product.

Cleaning should only be done with a soft brush, such as the brush supplied with the unit.

Do not use harsh or corrosive cleaners on the units or their cutters.

Do not apply pressure or hard objects to cutters.


Batteries should be replaced by an adult only. Do not use rechargeable batteries.



## EAR & NOSE HAIR TRIMMER



### PARTS IDENTIFICATION

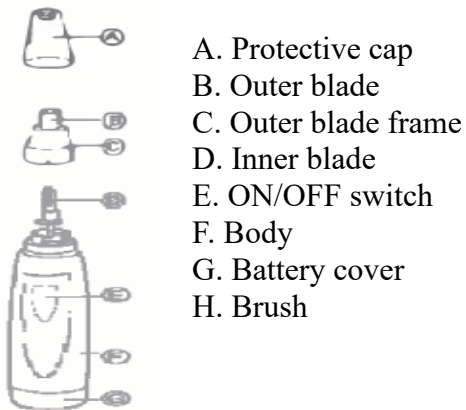

### WARNING / IMPORTANT

1. Read the use and care guide thoroughly before using the device.
2. Use the trimmer only for purposes described in this use and care guide.
3. For hygienic reasons, the trimmer should not be shared with others.
4. If signs of damage are visible, do not use trimmer and notify email support
5. Do not use if skin is red, irritated, inflamed, infected or blistered.
6. This trimmer is for household use only.
7. Do not place or store the trimmer in direct sunlight. Store only in a cool, dry place.
8. Keep the trimmer out of reach of children.
9. Do not insert trimmer beyond the outer blade or use forcefully within nose or ear

### HOW TO USE THE TRIMMER

1. Remove protective cap.
2. Turn unit switch ON.

3. Trim desired area. For trimming nose and ears, gently insert the outer blade into nostril or ear hole and rotate to cut hairs.

### **BATTERY CARE**

This trimmer is designed for use with one (1) AA battery (not included). If the trimmer motor slows down in operation or becomes less efficient, replace the battery. To replace the battery, gently twist off the bottom cover and insert one (1) AA battery observing correct polarity, and securely close bottom cover.

### **ENVIRONMENTAL PROTECTION**

The battery within this trimmer is equipped with contained substances which may result in environmental pollution. Do not dispose of the trimmer with household waste. Please recycle at a local recycling center for proper disposal.

### **CLEANING AND MAINTENANCE**

Do not use water on any part of the trimmer, it is not a waterproof product.  
Cleaning should only be done with a soft brush, such as the brush supplied with the unit.  
Do not use harsh or corrosive cleaners on the units or their cutters.  
Do not apply pressure or hard objects to cutters.  
Batteries should be replaced by an adult only. Do not use rechargeable batteries.

### **TECHNICAL SPECIFICATIONS**

Used with 3 AA batteries (not included)  
Comb sets: 3mm/6mm/9mm/12mm  
Precision cutting blade  
Stainless Steel blade  
Package content: Hair/Beard Trimmer, Ear/Nose Trimmer, 4 comb sets, comb, brush, oil.



Waste electrical and electronic equipment are a special waste category, collection, storage, transport, treatment and recycling are important because they can avoid environmental pollution and are harmful to health. Submitting waste electrical and electronic equipment to special collection centers makes the waste to be recycled properly and protecting the environment. Do not forget! Each electric appliance that arrives at the landfill, the field, pollutes the environment!



### **Importer & distributor:**

SC VITACOM ELECTRONICS SRL

CIF: RO 214527

Tel. 0264-438401\*

[office@vitacom.ro](mailto:office@vitacom.ro), [www.vitacom.ro](http://www.vitacom.ro)